

CAP ASSY.	22162
STATOR	22163
PROTECTOR — DISTRIBUTOR	22172
ABSOLUTE PRESSURE SENSOR	22366
COIL — IGNITION	22433
CABLE — HIGH TENSION (IGN. COIL TO DIST.)	22450
RESISTOR	22460
PROTECTOR — IGNITION COIL	22465
ALTERNATOR ASSY.	23100
ROTOR — ALTERNATOR	23108
BEARING — ALTERNATOR	23120
HOLDER & BRUSH	23133
PULLEY ASSY.	23150
REGULATOR — IC TYPE VOLTAGE	23215
DIODE SET	23230
MOTOR ASSY. — STARTER	23300
COIL ASSY. — FIELD	23306
ARMATURE ASSY.	23310
PINION ASSY. — CLUTCH	23312
GEAR — REDUCTION	23313
SWITCH ASSY. — MAGNETIC	23343
BRUSH	23380
THROTTLE CONTROL UNIT — TCS	23790
ENGINE SUB HARNESS	24079
CABLE — BATTERY FIX	24110
RELAY — ALT. "L"	24336
TRAY — BATTERY	24428
ENGINE START SWITCH ASSY.	25150
THROTTLE MOTOR RELAY	25171
RELAY — IGNITION COIL	25230
RELAY — STARTER	25243
RELAY — N & P	25276
ACTUATOR ASSY. — TCS	41810
PUMP ASSY. — TCS	41830
RESERVOIR TANK — TCS	41871
CONTROL UNIT ASSY. — TCS	47860

EMISSION CONTROL SYSTEMS

TUBE — E.G.R.	14120
VALVE — E.G.R. CONTROL	14710
E.G.R. PASSAGE	14711
TUBE — VACUUM	14729
PURGE CONTROL VALVE	14930
EVAP CAN PRGE VOL CONT SOL VLV	14931
PURGE CONTROL SOLENOID	14932
EVAP PURGE RESONATOR	14934
DRAIN CUT VALVE ASSY.	14936
VAPOR CANISTER ASSY.	14949
PURGE CUT VALVE	14963
WATER TEMPERATURE SWITCH	22120
SWITCH — CANISTER CNTRL VACUUM CK	22360
PROTECTOR — REAR OXYGEN SENSOR	22692
EX GAS SENSOR HOLD RELAY	25226

ELECTRICAL FUEL INJECTION/ECC

SENSOR — EXHAUST GAS TEMP.	14730
VALVE — B.P.T. (BACK PRES. TRANSDUCER)	14741
EAI UNIT	14810
EAI PIPE	14823
AB VALVE	14835
AIR INDUCTION HOSE	14860
SERVICE PORT — EVAP	14939
VALVE — E.G.R. SOLENOID	14954
VALVE — A/V CONTROL SOLENOID	14956
INJECTOR — FUEL	16603
MODULE — FUEL PUMP CONTROL	17001
CHAMBER — THROTTLE, EFI/ECCS	17118
DETONATION SENSOR	22060
VIA S VENT HOSE	22320
POWER VALVE VACUUM TANK	22327
UNIT — EFI CONTROL	22611
SWITCH — THROTTLE VALVE	22620
SENSOR — WATER TEMP.	22630
SENSOR — CYLINDER ALTITUDE	22632
REGULATOR — AIR	22660
REGULATOR — PRESSURE	22670
METER — AIR FLOW	22680
BRACKET — AIR FLOW METER	22682
AIR/FUEL RATIO SENSOR	22689
RESISTOR — DROPPING	22695
RELAY — ECC/EFI	22696

RELAY — FUEL PUMP	22697
FUEL DROPPING RESISTOR	22698
SENSOR — CRANK ANGLE	23730
CRANKSHAFT POSITION SENSOR (OBD POS)	23731
CRANKSHAFT POSITION SENSOR (REF)	23732
RING GEAR SENSOR ASSY.	23733
INT VALVE TIMING CONT POS SENSOR	23734
VALVE — A.A.C.	23781
HARNESS/SUBHARNESS — EFI	24011

POWER TRAIN

TRANSMISSION

BOLT — FIXING (FLYWHEEL)	12315
PLATE ASSY. — DRIVE	12331
A/T OIL COOLER ASSY.	21606
TUBE — OIL COOLER	21621
OIL COOLER HOSE	21631
A/T OIL FILTER	21640
RESISTOR — DROPPING (A/T CONT)	22693
DRIVE CHAIN SWITCH ASSY.	25129
OVERDRIVE CANCEL SWITCH	25130
SHIFT PTRN SELECT SW	25131
SHIFT LOCK RELAY	25206
SWITCH — KICKDOWN	25390
SWITCH — CLUTCH INTERLOCK	25402
A/T STEERING SWITCH	25549
CONTROLLER ASSY. — SELECT LOCK	28491
CLUTCH COVER ASSY.	30210
CLUTCH HOUSING	30400
SLEEVE — CLUTCH RELEASE	30501
BEARING — CLUTCH RELEASE	30502
LEVER — CLUTCH WITHDRAWAL	30531
PIN — WITHDRAWAL LEVER	30537
CLUTCH COVER ASSY.	30542
CLUTCH DAMPER	30600
RESERVOIR TANK	30609
CLUTCH MASTER CYLINDER	30610
CLUTCH OPERATING CYLINDER	30620
BLEEDER	30621
PUSH ROD	30628
PUSH ROD	30631
FLUID FILLER TUBE	30645
CLUTCH TUBES & HOSES	30650
CLUTCH ORIFICE ASSY.	30652
BRANCH CONNECTOR	30656
CABLE — CLUTCH OPERATING	30670
BOLT — SELF LOCK CONVERTER	31009
TRANSMISSION ASSY.	31020*
AUTO T/M CONTROL UNIT	31036
SWITCH — OVERDRIVE INDICATOR	31041
CABLE — THROTTLE	31051
OIL LEVEL GAUGE & PIPE	31080
CONVERTER ASSY. — TORQUE	31100
CONVERTER HOUSING	31301
CONVERTER HOUSING GASKET	31309
CASE — TRANSMISSION	31310
CASE — OVERDRIVE	31322
EXTENSION/ADAPTER ASSY.	31330
GASKET — REAR EXTENSION	31335
SEAL EXTENSION ADAPTOR — OIL	31336
PUMP ASSY. — OIL	31340
SEAL — FRONT OIL	31343
SEAL — OIL, OIL PUMP HOUSING	31344
ROTOR SET — OIL PUMP	31345
GASKET — OIL PUMP	31366
BEARING RETAINER	31370
BREATHER — AIR	31381
DRUM SUPPORT	31385
PAN ASSY. — OIL	31390
SIDE COVER	31391
SIDE COVER GASKET	31396
GASKET — OIL PAN	31397
SEALS — ALL INTERNAL A/T	31398
SHAFT — INPUT	31411
SHAFT — INTERMEDIATE	31416
CARRIER ASSY. — FRONT PLANET	31420
BEARING — NEEDLE THRUST	31428
CARRIER ASSY. — REAR PLATE	31440
CLUTCH ASSY. — ONE WAY	31473

HUB — FORWARD CLUTCH	31475
SHAFT ASSY. — OUTPUT	31480
DISTRIBUTOR ASSY. — OIL/GEAR PARKING	31486
IDLER GEAR	31493
CLUTCH ASSY. — DIRECT	31505
CLUTCH ASSY. — FRONT/REVERSE	31510
DRUM — REVERSE CLUTCH	31512
CLUTCH ASSY. — REVERSE	31515
REAR/HIGH CLUTCH ASSY.	31540
DRUM — HIGH CLUTCH	31541
CLUTCH ASSY. — HIGH	31545
HUB — HIGH CLUTCH	31550
CLUTCH ASSY. — FORWARD	31570
DRUM ASSY. — FORWARD CLUTCH	31571
OVERDRIVE PLANETARY CARRIER	31580
HUB — OVERRUN CLUTCH	31591
CLUTCH ASSY. — OVERRUN	31595
PISTON — BAND SERVO	31615
BAND ASSY. — BRAKE	31630
PISTON — LOW/REVERSE BRAKE	31645
BRAKE ASSY. — LOW & REVERSE	31650
ACCUMULATOR	31671
PINION — SPEEDOMETER	31703
VALVE ASSY. — CONTROL	31705
OIL STRAINER	31728
GOVERNOR ASSY.	31860
CASE & GEAR — A/T SPEEDOMETER	31883
LEVER — RANGE SELECTOR	31913
SEAL — GASKET & O-RING	31916
SWITCH ASSY. — INHIBITOR	31918
SHAFT ASSY. — MANUAL	31921
PLATE ASSY. — MANUAL	31924
VACUUM DIAPHRAGM	31931
O-RING SEAL	31933
REVOLUTION SENSOR	31935
TURBINE REVOLUTION SENSOR	31936
DOWNSHIFT SOLENOID	31941
SOLENOID — LOCKUP	31942
SHIFT SOLENOID A	31943
SHIFT SOLENOID B	31944
SOLENOID — OVERDRIVE CANCEL	31945
SOLENOID — LINE PRESSURE	31946
SOLENOID — OVERRUNNING CLUTCH	31947
LOW TEMPERATURE SENSOR	31958
ROD ASSY. — PARKING	31970
SHAFT ASSY. — PARKING PAWL	31986
SWITCH — REVERSE LAMP	32005
SWITCH — TOP/NEUTRAL	32006
DIFFERENTIAL LOCK ACTUATOR SWITCH	32009
MANUAL TRANSAXLE ASSY.	32010*
TRANSAXLE CASE	32100
DRAIN PLUG	32103
FILLER PLUG	32105
OIL GUIDE/GUTTER	32107
OIL GUTTER	32108
TRANSMISSION MAGNET	32109
TRANSMISSION FRONT COVER ASSY.	32110
FRONT COVER GASKET	32112
FRONT COVER OIL SEAL	32113
CASE COVER	32129
REAR EXTENSION ASSY.	32130
BREATHER	32131
REAR EXTENSION OIL GUTTER	32132
YOKE SLEEVE DUST COVER	32135
REAR EXTENSION OIL SEAL	32136
ADAPTER PLATE	32137
BEARING RETAINER	32139
EXTENSION UPPER COVER	32142
EXTENSION UPPER COVER GASKET	32143
BAFFLE PLATE	32150
MAIN DRIVE SHAFT GEAR ASSY.	32200
BEARING — PILOT	32202
MAIN DRIVE BEARING	32203
SNAP RING	32204
OUTPUT BEARING	32205
COUNTER SHAFT	32211
INPUT SHAFT	32213
3RD MAIN GEAR	32215
4TH MAIN GEAR	32218
BEARING — INPUT SHAFT	32219
PILOT BEARING SPACER	32221
COUNTER SHAFT RR THRUST WASHER	32225
GEAR — 1ST MAIN	32230
MAINSHAFT	32241

*Replacement of this assembly must be coded with the PNC of the causal failed part.